


LashAssist User Manual

Doc.nr AD00389 En

Doc.nr: AD00389 En REV_B © Copyright ExTe Fabriks AB, 2026

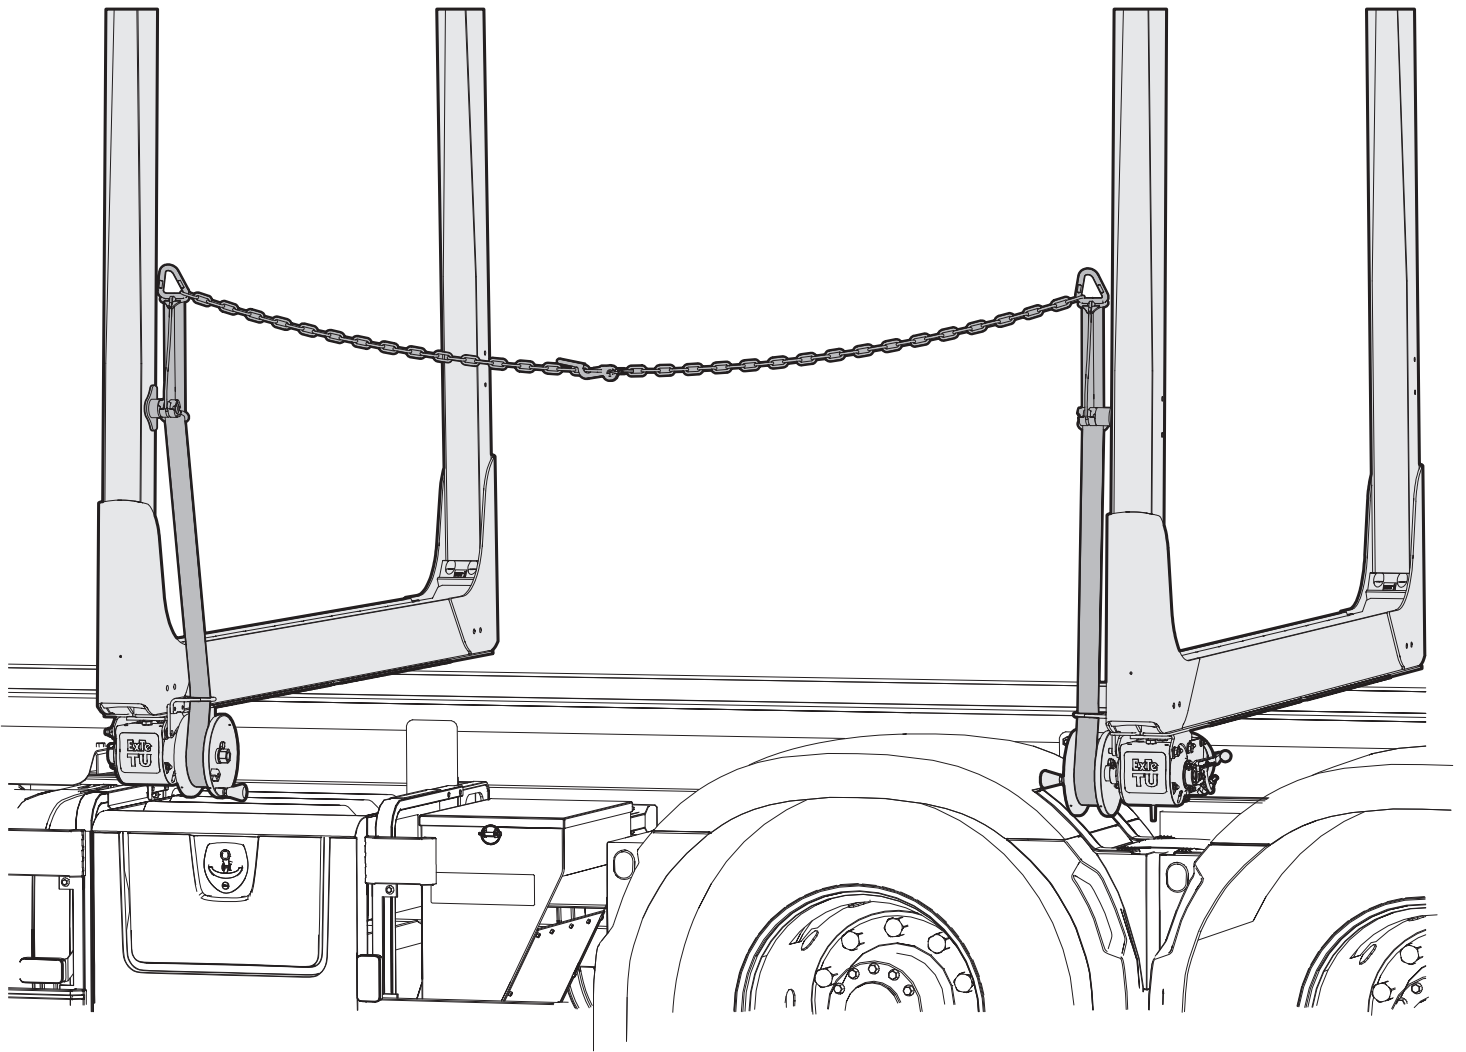

ExTe


Securing cargo. We invented the Concept.

ExTe Fabriks AB, BOX 18, SE-827 62 Färila, Sweden. Tel: +46 (0)651-175 00. E-mail: info@exte.se www.exte.se

FUNCTION


The LashAssist is hinged and can rotate approximately 90 degrees. It has two loops that guide the strap. The triangle at the end of the strap cannot pass through the upper loop, which therefore acts as a stop.

1. In the folded position, the LashAssist is held in place by the force from the tensioner.
2. In the deployed position, the chain can easily be accessed between the loops using the grapple. The tensioner is set to free position.

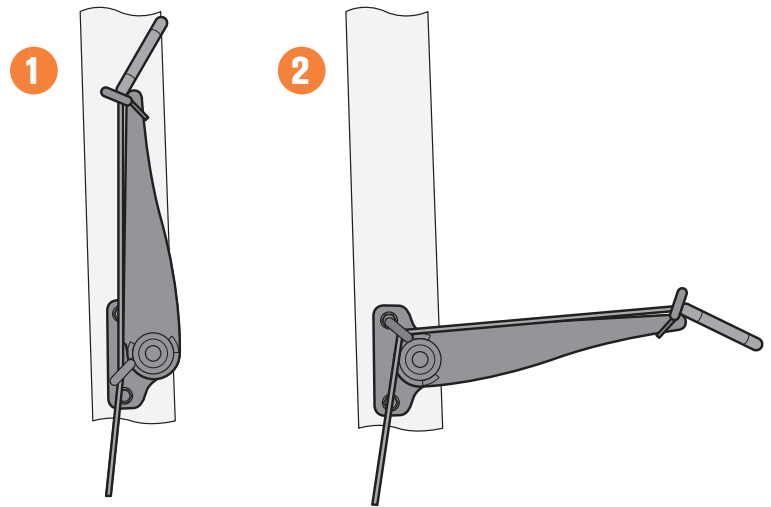


OPERATION


1. Set the tensioner to free position and lower the grapple toward the chain.

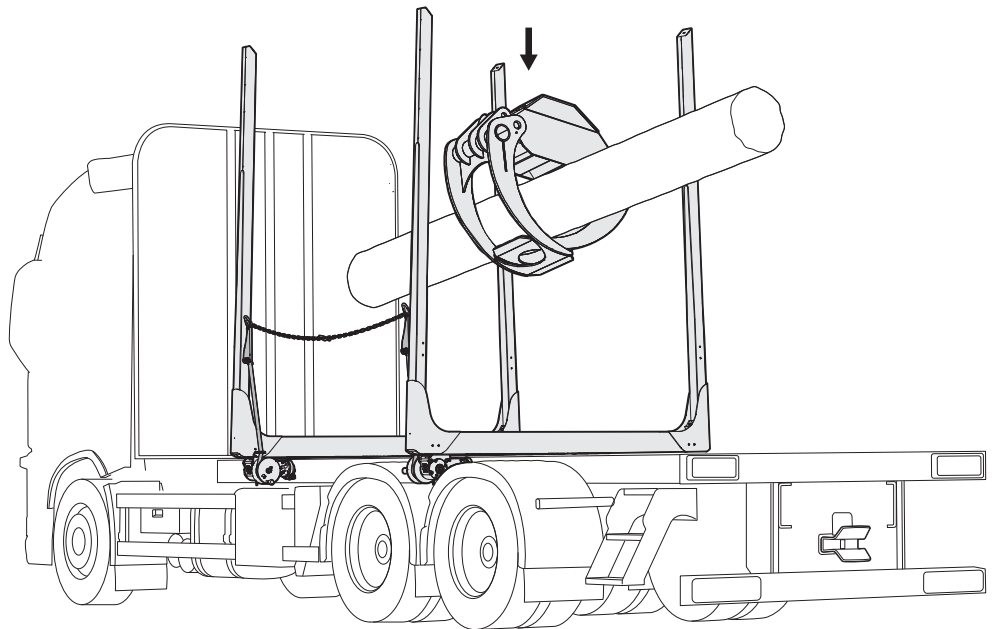


2. Use the grapple to push the chain away from the vehicle, causing the LashAssist to move to their deployed positions.

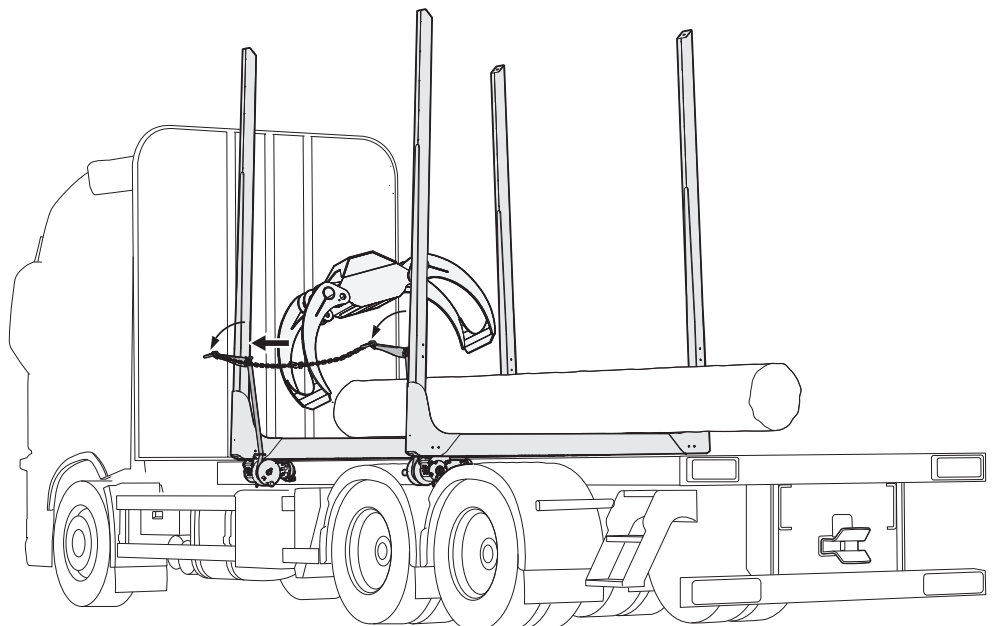


3. After loading, lower the grapple along the side of the load to grab the chain.

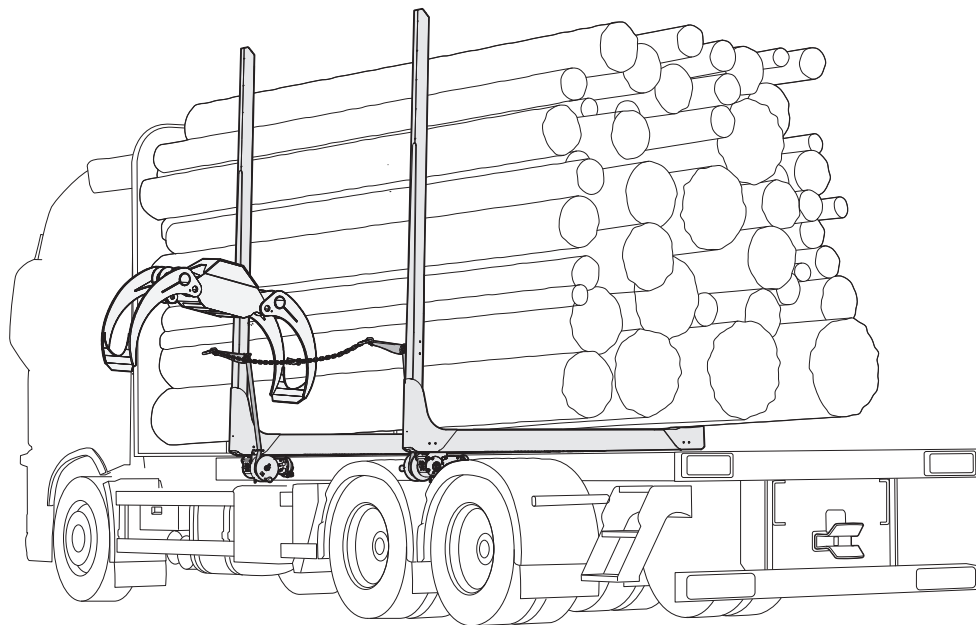



4. Lift the sling, consisting of strap and chain, over the load and secure it on the opposite side of the load.

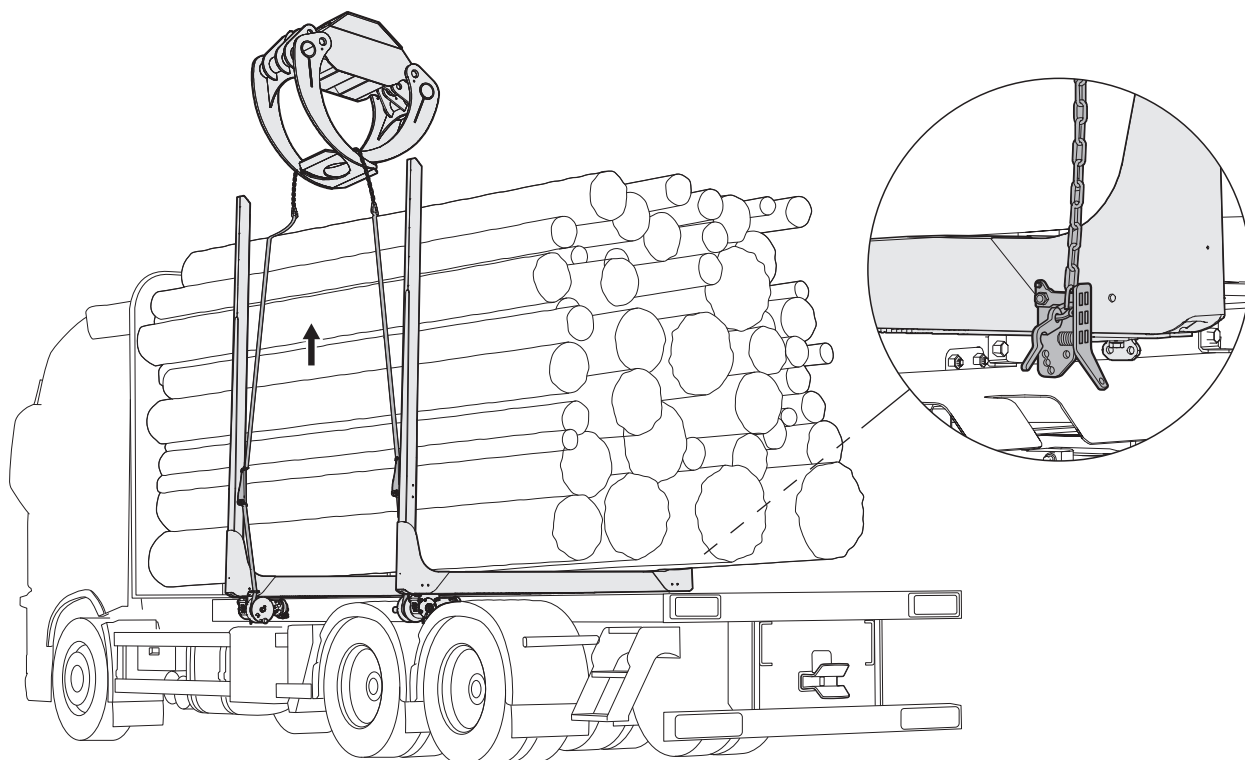


INSTALLATION

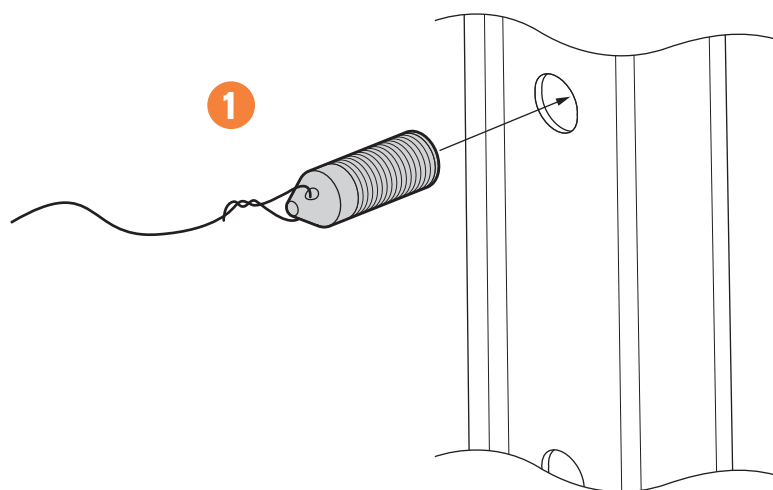

1. Attach the installation screw (part no. 220261) to a steel wire and feed it through the upper hole in the stake.
2. Allow the installation screw to travel down the inside of the stake and exit at the bottom.
3. Insert the installation screw into the nut plate.

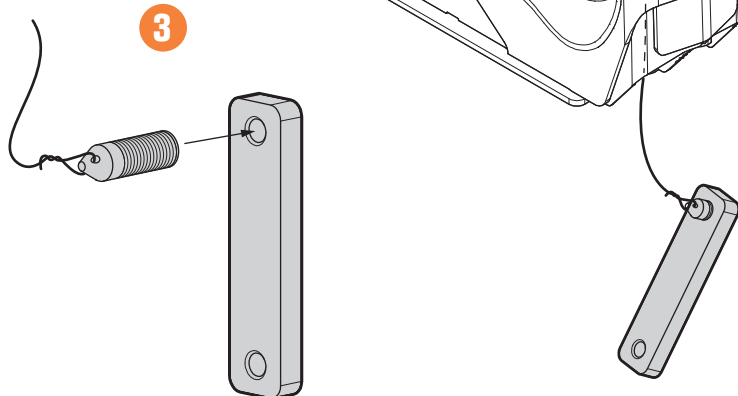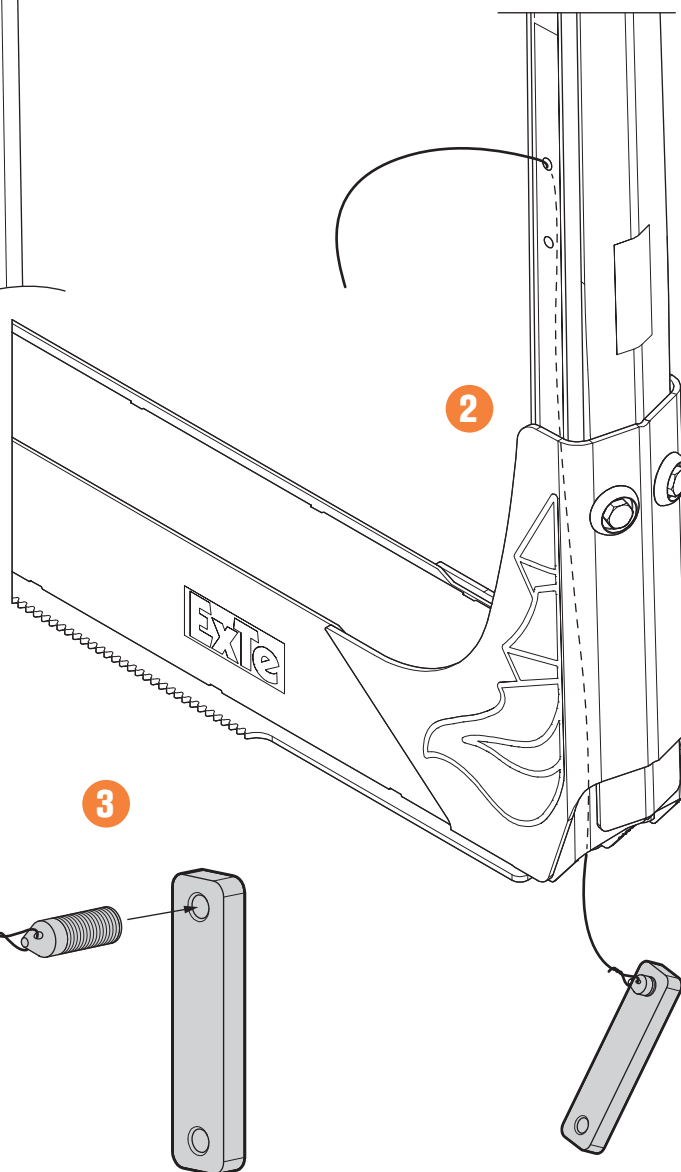


⚠ For aluminium stakes, two holes must be drilled. Drill two holes with a diameter of Ø11 mm according to the specified measurements.

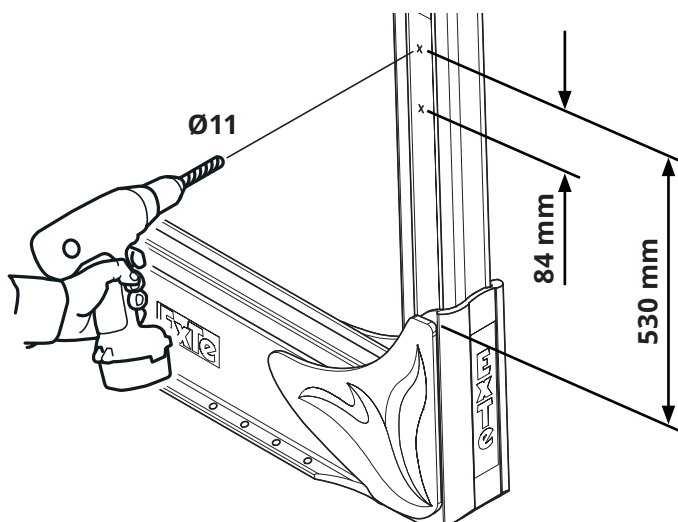


4. Move the nut plate upward inside the stake and pull the installation screw through the upper hole.

5. Fasten the LashAssist in the correct position.

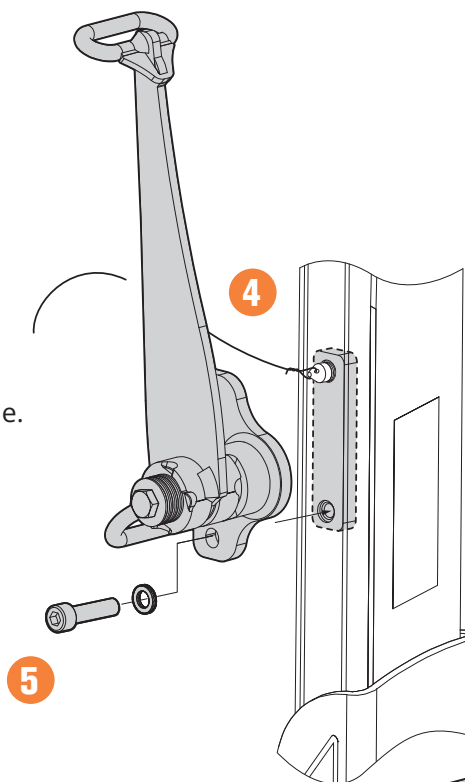


6. Remove the installation screw.


7. Install the second screw and tighten both screws to **50 Nm**.

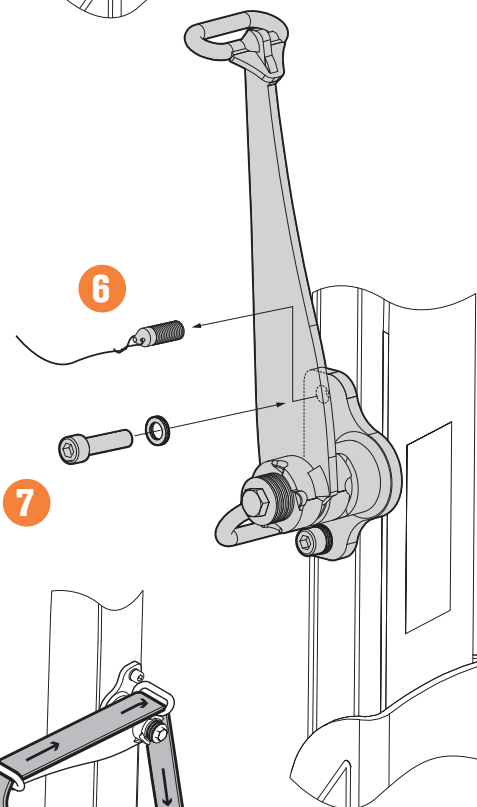


8. Thread the tensioning strap through the loops of the LashAssist and attach the end to the tensioner drum.

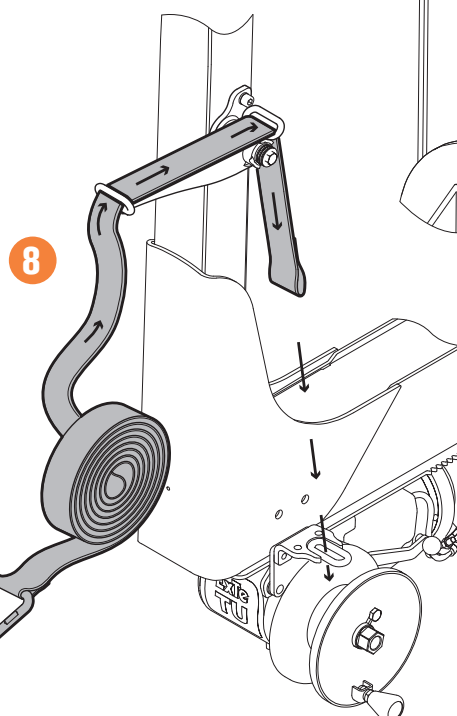

⚠ Band guidance is a requirement to ensure that the band is wound onto the drum correctly.

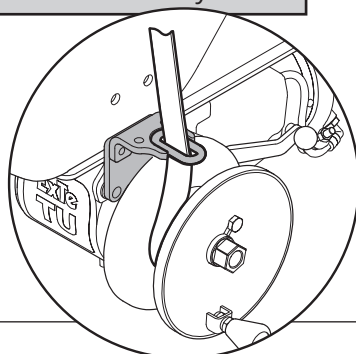

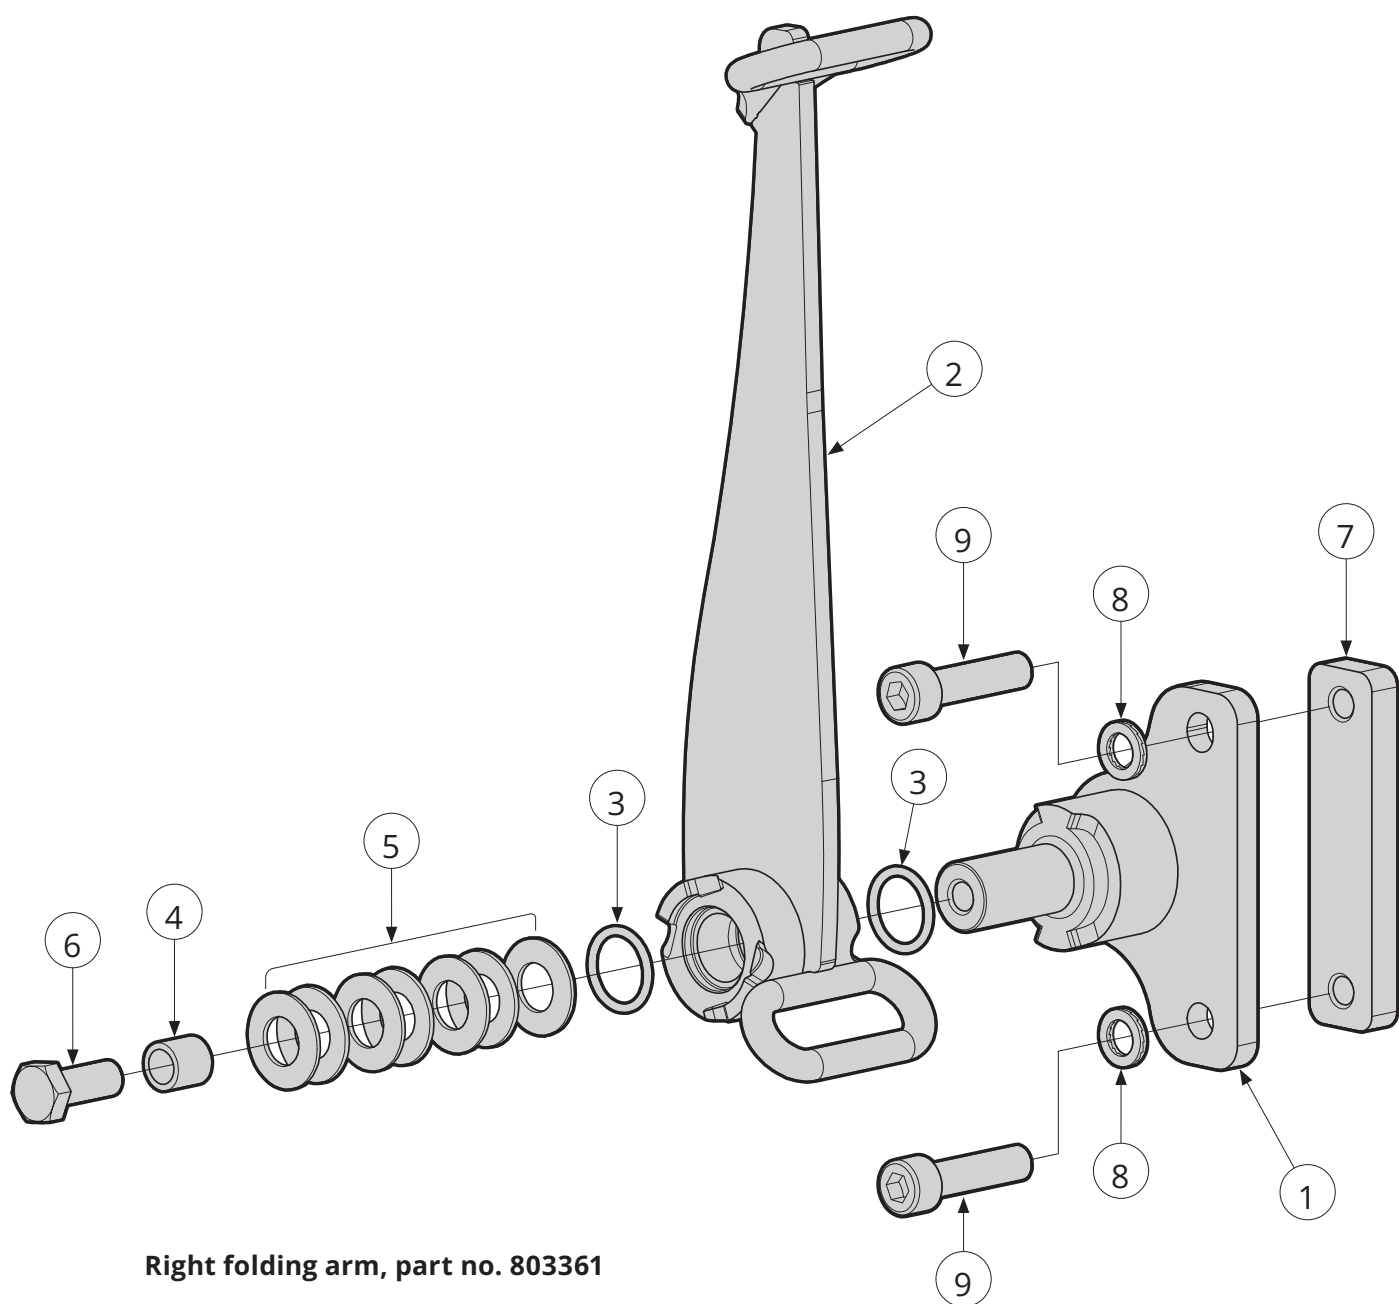

Right folding arm, part no. 803361

Left folding arm, part no. 803362

Pos	Part No.	Description	Qty
1	420882	Arm Bracket	1
2	420887	Strap Arm	1
3	420888	O-ring NBR 20×2,5	2
4	420889	Sleeve	1
5	420886	TFR 28×14×2×1,5	7
6	211062	Screw M6S M10×25 FZB	1
7	30231	Nut Plate	1
8	211922	Washer NL10, M10 Steel	2
9	211648	Skrew MC6S M10×40 FZB	2



ExTe Fabriks AB
Gundbergsvägen 6
SE-827 62 Färila, Sweden
Tel: +46(0)651 175 00
sales@exte.se
support@exte.se

www.exte.se